

## Plattenformen und Tischausführungen A-F

**ergo P3R**

Ausf. A B1 / B2	Ausf. B B1 / B2	Ausf. C B1 / B2	Ausf. D B2 / B1	Ausf. E B1 / B2 / B1	Ausf. F B1 / B2
Plattenformen: 001	002	003	005	006	007 016

**ergo M**

Form 110	120	130	140	150

**ergo M3**

Ausf. A B1 / B2	Ausf. B B1 / B2	Ausf. C B1 / B2	Ausf. D B2 / B1	Ausf. E B1 / B2 / B1	Ausf. F B1 / B2

**ergo M3R**

Ausf. C B1 / B2	Ausf. D B2 / B1				
		Form 005	006	007	016

**ergo M7 ergo MC 50/68/72 R**

Plattenformen: Form 011	Form 012	Form 013

**ergo MC 72**

Plattenformen: Form 011	Form 013	Form 010	Form 009	Form 004	Form 014

**ergo MC 72**

Plattenformen: Form 015	Form 017	Form 018	Form 019

**ergo MC3 72**

Plattenformen: Form 020	Form 021	Form 022	Form 023

**ergo M8 72**

Plattenformen: Form 008	Form 018	Form 019	Form 026	027	028	029

**ergo M10**

Plattenformen: Form 024	024 C	024 D	Form 025	025 C	025 D

Die Buchstaben bezeichnen die Ausführung